

Pilot Radio Corp.

Model: 195

Chassis:

Year: Pre October 1936

Power:

Circuit:

IF:

Tubes:

Bands:


Resources

Riders Volume 7 - PILOT 7-7

Riders Volume 7 - PILOT 7-8

PILOT RADIO CORP.

MODELS 193, 195
Schematic, Socket
Trimmers, Parts



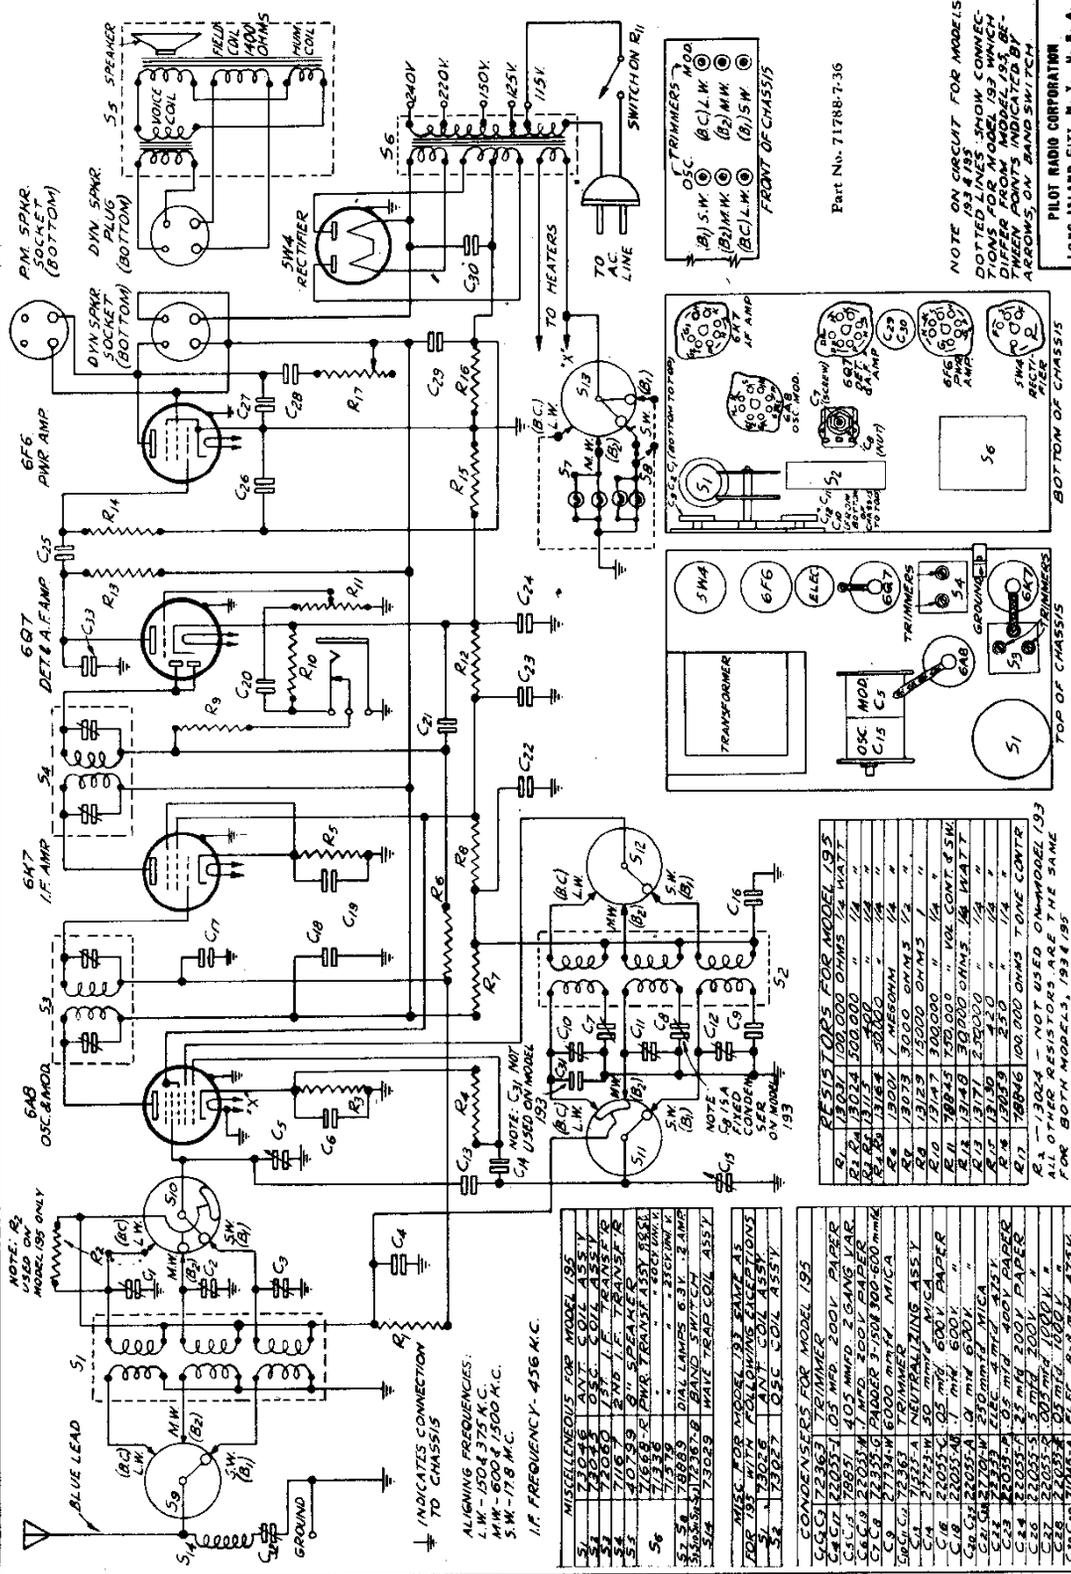


Part No. 71788-7-36

NOTE ON CIRCUIT FOR MODELS 193 AND 195: DOTTED LINES SHOW CONNECTIONS FOR MODEL 193 WHICH DIFFER FROM MODEL 195. BE-ARROWS, ON BAND SWITCH, POINT TO MODEL 193.

PILOT RADIO CORPORATION
LONG ISLAND CITY, N. Y. U. S. A.
SCHEMATIC CIRCUIT DIAGRAM
& CHASSIS LAYOUT FOR
MODELS 193 & 195

Order No. 71788-7-36
Copyright © 1935
Approved by: *[Signature]*

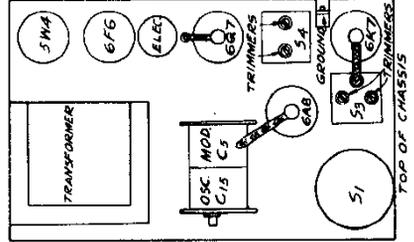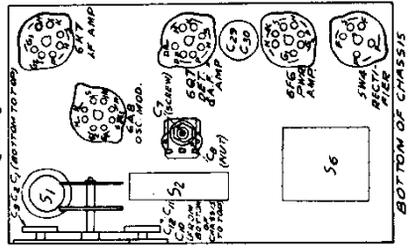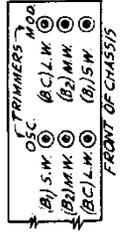

RESISTORS FOR MODEL 193

R1	100K	1/2 WATT
R2	100K	1/2 WATT
R3	100K	1/2 WATT
R4	100K	1/2 WATT
R5	100K	1/2 WATT
R6	100K	1/2 WATT
R7	100K	1/2 WATT
R8	100K	1/2 WATT
R9	100K	1/2 WATT
R10	100K	1/2 WATT
R11	100K	1/2 WATT
R12	100K	1/2 WATT
R13	100K	1/2 WATT
R14	100K	1/2 WATT
R15	100K	1/2 WATT
R16	100K	1/2 WATT
R17	100K	1/2 WATT
R18	100K	1/2 WATT
R19	100K	1/2 WATT
R20	100K	1/2 WATT
R21	100K	1/2 WATT
R22	100K	1/2 WATT
R23	100K	1/2 WATT
R24	100K	1/2 WATT

MISCELLANEOUS FOR MODEL 193

S1	ANT. COIL ASSY
S2	OSC. COIL ASSY
S3	IF TRANSFORMER
S4	IF TRANSFORMER
S5	5Y4 RECTIFIER
S6	5Y4 RECTIFIER
S7	5Y4 RECTIFIER
S8	5Y4 RECTIFIER
S9	5Y4 RECTIFIER
S10	5Y4 RECTIFIER
S11	5Y4 RECTIFIER
S12	5Y4 RECTIFIER
S13	5Y4 RECTIFIER
S14	5Y4 RECTIFIER
S15	5Y4 RECTIFIER
S16	5Y4 RECTIFIER
S17	5Y4 RECTIFIER
S18	5Y4 RECTIFIER
S19	5Y4 RECTIFIER
S20	5Y4 RECTIFIER
S21	5Y4 RECTIFIER
S22	5Y4 RECTIFIER
S23	5Y4 RECTIFIER
S24	5Y4 RECTIFIER
S25	5Y4 RECTIFIER
S26	5Y4 RECTIFIER
S27	5Y4 RECTIFIER
S28	5Y4 RECTIFIER
S29	5Y4 RECTIFIER
S30	5Y4 RECTIFIER
S31	5Y4 RECTIFIER
S32	5Y4 RECTIFIER
S33	5Y4 RECTIFIER
S34	5Y4 RECTIFIER
S35	5Y4 RECTIFIER
S36	5Y4 RECTIFIER
S37	5Y4 RECTIFIER
S38	5Y4 RECTIFIER
S39	5Y4 RECTIFIER
S40	5Y4 RECTIFIER
S41	5Y4 RECTIFIER
S42	5Y4 RECTIFIER
S43	5Y4 RECTIFIER
S44	5Y4 RECTIFIER
S45	5Y4 RECTIFIER
S46	5Y4 RECTIFIER
S47	5Y4 RECTIFIER
S48	5Y4 RECTIFIER
S49	5Y4 RECTIFIER
S50	5Y4 RECTIFIER
S51	5Y4 RECTIFIER
S52	5Y4 RECTIFIER
S53	5Y4 RECTIFIER
S54	5Y4 RECTIFIER
S55	5Y4 RECTIFIER
S56	5Y4 RECTIFIER
S57	5Y4 RECTIFIER
S58	5Y4 RECTIFIER
S59	5Y4 RECTIFIER
S60	5Y4 RECTIFIER
S61	5Y4 RECTIFIER
S62	5Y4 RECTIFIER
S63	5Y4 RECTIFIER
S64	5Y4 RECTIFIER
S65	5Y4 RECTIFIER
S66	5Y4 RECTIFIER
S67	5Y4 RECTIFIER
S68	5Y4 RECTIFIER
S69	5Y4 RECTIFIER
S70	5Y4 RECTIFIER
S71	5Y4 RECTIFIER
S72	5Y4 RECTIFIER
S73	5Y4 RECTIFIER
S74	5Y4 RECTIFIER
S75	5Y4 RECTIFIER
S76	5Y4 RECTIFIER
S77	5Y4 RECTIFIER
S78	5Y4 RECTIFIER
S79	5Y4 RECTIFIER
S80	5Y4 RECTIFIER
S81	5Y4 RECTIFIER
S82	5Y4 RECTIFIER
S83	5Y4 RECTIFIER
S84	5Y4 RECTIFIER
S85	5Y4 RECTIFIER
S86	5Y4 RECTIFIER
S87	5Y4 RECTIFIER
S88	5Y4 RECTIFIER
S89	5Y4 RECTIFIER
S90	5Y4 RECTIFIER
S91	5Y4 RECTIFIER
S92	5Y4 RECTIFIER
S93	5Y4 RECTIFIER
S94	5Y4 RECTIFIER
S95	5Y4 RECTIFIER
S96	5Y4 RECTIFIER
S97	5Y4 RECTIFIER
S98	5Y4 RECTIFIER
S99	5Y4 RECTIFIER
S100	5Y4 RECTIFIER

PILOT MODELS 193 AND 195

MODELS 193, 195

Voltage, Alignment

PILOT RADIO CORP.

AC MODELS 193 and 195

(MODEL 195 IS SOLD OUTSIDE THE U. S. A. ONLY)

ALIGNMENT OF THE SHORT-WAVE BANDS:
The procedure in aligning the short-wave bands is identical with that for the broadcast with the exception of the adjustment of the padder condenser which is of fixed value and requires no adjustment. The alignment frequency is 16.6 Meters—(18,000 kc.)

Turn the Band Switch to the right. Tune the external oscillator to 16.6 meters. Tune the receiver so that the dial pointer is in a position coincidental with the 16.6 meter indication on the dial scale. Adjust the short wave oscillator trimmer for maximum response. Next adjust the signal circuit trimmer for maximum resonance. Repeat all adjustments to assure correct alignment, rocking the gang condenser to right or left for maximum gain.

Model 193 is aligned in the same manner at 6,000 kc. with the switch in Band 2 position.

LONG WAVE ALIGNMENT: Procedure in the Model 195 is similar to the Broadcast section of that receiver. Align at 375 kc. Adjust the padder at 160 kc.

Should it be necessary to remove the band switch assembly, it is advisable to realign the receiver after re-installing.

VOLTAGES

The D. C. Voltages measured at the tube sockets of the set should be read with a high resistance voltmeter of at least 1000 ohms per volt.

	POWER				
	OSC. DET. Type 6A8	I. F. Type 6K7	DIODE DET. Type 6Q7	PENTODE Type 6F6	RECTIFIER Type 5W4
Plate	230	230	105*	205	***
Cathode	4.	3.	1.5	**	
Screen	85	85	6.3	230	
Filament	6.3	6.3	6.3	6.3	

*Voltages measured through 250,000 ohm resistor.

Speaker field voltage 90 volts. All plate voltages measured to cathode. All screen voltages measured to cathode. All cathode voltages measured to chassis frame.

**Grid bias voltage for No. 42 tube obtained across R-16 (250 ohms resistor).

***Filament to chassis ground 315 volts D. C.

Anode grid of 6A7 to cathode—195 volts.

ALIGNMENT OF THE SHORT WAVE-BANDS—

The procedure in aligning the short wave-bands is identical with that for the broadcast with the exception of the adjustment of the padder condenser. The alignment frequencies are as follows:

- Band 2: 50 Meters—(6,000 kc.)
- Band 1: 16.6 Meters—(18,000 kc.)

A 400 ohm resistor should be used in series with the antenna lead in place of the condenser used on Broadcast.

When aligning Band 2, set the Band Selector Switch in the position marked "Band 2." Set the tuning control pointer at 50 meters. Adjust the oscillator alignment capacitor on Band 2 for maximum output. Next adjust the interstage and antenna section alignment capacitors for maximum output.

To align Band 1, set the Band Selector Switch in the position marked "Band 1". Set the tuning control pointer at the 16.6 meter mark. Set the external oscillator at 16.6 meters. Adjust the oscillator section alignment capacitor on Band 1 for maximum output.

Proceed next to align the interstage section of Band 1. In doing this, it is essential to rock the tuning control back and forth about the resonance position and at the same time to adjust the trimmer for the highest resonance peak. Next align the antenna section for maximum sensitivity.

LONG WAVE MODEL 255

The above alignment positions refer to the Model 253 only, which is calibrated in frequency. The alignment points for the Model 255, which is calibrated in meters only, is as follows:

- High Band Align at 750 meters. Pad at 2,000 meters.
- Broadcast Align at 200 meters. Pad at 500 meters.
- Band 2 Align at 49 meters.
- Band 1 Align at 17 meters.

The Model No. 253 is an all wave superheterodyne receiver with a frequency range extending from 18,800 kc. to 545 kc. (16 meters to 550 meters). The Model No. 255 is similar to the Model No. 253 but has an additional long wave range embracing the wavelengths from 750 meters to 2000 meters (400 kc. to 150 kc.)

MODELS 253, 255

Alignment

Frequency Rating — 50 to 60 cycles.
Power Consumption—60 Watts.
Tubes — 1 type 6A8, 1 type 6K7, 1 type 6Q7, 1 type 6F6, 1 type 5W4.
Undistorted power output—3 watts.
Intermediate Frequency—456 kc.

I. F. ALIGNMENT: When aligning the Intermediate Frequency Amplifier, the external oscillator must be set at 456 kc. The Band Switch should be in the position marked "Broadcast," and the tuning condenser should be set at maximum capacity. Connect the "antenna" lead of the external oscillator to the control grid of the type 6K7 tube in the I. F. Amplifier stage through a .1 mfd. fixed condenser. Connect the "ground" lead of the external oscillator to the receiver ground lead. The I. F. alignment capacitors are located at the top of the shielded I. F. Transformers. Rotate the adjusting screw of each capacitor on I. F. Unit No. 2 slowly until maximum output is noted. On completion of this operation, remove the external oscillator leads from the type 6K7 I. F. Amplifier tube and connect it in the same manner to the control grid at the top of the type 6A8 tube.

Now rotate each adjustment screw on I. F. Unit No. 1 for maximum output. During these operations, use the least possible input to prevent broadening of the resonance peaks.

In order to obtain the most accurate realignment of the I. F. Amplifier, it is essential to repeat the alignment process in both I. F. units with the external oscillator leads connected across the control grid of the 6A8 tube.

WAVE TRAP ADJUSTMENT: With the oscillator still set at 456 kc., connect the oscillator to the antenna and ground. Then adjust the wave trap condenser to minimum deflection on the output meter.

BROADCAST ALIGNMENT: After the I. F. Amplifier is completely realigned, connect the external oscillator leads to the receiver antenna and ground leads, through a .0002 mfd. condenser. Set the Band Switch in the "Broadcast" position and place the tuning control pointer at the 1500 kc. mark. Adjust the broadcast band oscillator trimmer to maximum response. Adjust the signal section trimmer in the same manner.

Next adjust the 600 kc. padder condenser. Set the external oscillator at 600 kc. Rotate the receiver tuning control until resonance is indicated. Then rock the tuning control back and forth about this resonance position, and at the same time adjust the padder condenser for the highest resonance peak.

Now repeat the 1500 kc. trimmer adjustment, following in every detail the procedure previously described.

Models 253 and 255 All-Wave, (MODEL 255 IS SOLD IN THE EUROPEAN AREA ONLY)

The location of the R. F. alignment trimmer condensers is on the side of the band switch. The trimmers in the lowest row are those for aligning Band 1. Those in the second row from the bottom are for Band 2. Those in the third row up are for the Broadcast. In the Model 255 there is an additional row of trimmers located immediately above those for the Broadcast.

The padder condenser is located under the rear section of the band switch. In the Model 255 an additional padder for the long wave range is located at the right of the Broadcast padder. Access to the padder condenser is made through a hole provided in the rear of the chassis frame.

I. F. ALIGNMENT: When aligning the Intermediate Frequency Amplifier, the external oscillator must be set at 456 kc. The Band Selector Switch should be in the position marked "Broadcast," and the tuning condenser should be set at maximum capacity. Connect the "antenna" lead of the external oscillator to the control grid of the type 6D6 tube in the I. F. Amplifier stage through a .1 mfd. fixed condenser. Connect the "ground" lead of the external oscillator to the receiver ground lead. The I. F. alignment capacitors are located at the side of the shielded I. F. Transformers. Rotate the adjusting screw of each capacitor on I. F. Unit No. 2 slowly until maximum output is noted. On completion of this operation, remove the external oscillator lead from the type 6D6 I. F. amplifier tube and connect it in the same manner to the control grid at the top of the type 6A7 tube.

Now rotate each adjustment screw on I. F. Unit No. 1 for maximum output. During these operations, use the least possible input to prevent broadening of the resonance peaks.

In order to obtain the most accurate realignment of the I. F. amplifier, it is essential to repeat the alignment process in both I. F. Units with the external oscillator leads connected across the control grid of the 6A7 tube.

BROADCAST ALIGNMENT:

See Models 193 & 195

CAUTION: BE CERTAIN OF THE POLARITY OF THE BATTERY BEFORE CONNECTING THE RECEIVER TO IT, OR SERIOUS DAMAGE TO THE RECEIVER MAY RESULT.
 This receiver is designed to operate entirely from a six volt storage battery. A 100-ampere-hour battery is recommended. Connections to the battery are made by means of the RED and the BLACK rubber covered leads. A large clip is attached to each lead. Connect the RED lead to the POSITIVE terminal of the battery. Connect the BLACK lead to the NEGATIVE terminal.