


SERVICE MANUAL

BE-4 CHASSIS

MODEL	COMMANDER	DEST.	CHASSIS NO.	MODEL	COMMANDER	DEST.	CHASSIS NO.
KV-14M1A	RM-836	Italian	SCC-H64G-A	KV-14M1K	RM-836	OIRT	SCC-H52H-A
KV-14T1A	RM-836	Italian	SCC-H64F-A	KV-14T1K	RM-836	OIRT	SCC-H52F-A
KV-14M1B	RM-836	French	SCC-H65F-A	KV-14M1L	RM-836	Irish	SCC-H51D-A
KV-14T1B	RM-836	French	SCC-H65E-A	KV-14T1L	RM-836	Irish	SCC-H51C-A
KV-14M1D	RM-836	AEP	SCC-H46G-A	KV-14T1R	RM-836	OIRT	SCC-H52G-A
KV-14T1D	RM-836	AEP	SCC-H46F-A	KV-14M1U	RM-836	UK	SCC-H50F-A
KV-14M1E	RM-836	Spanish	SCC-H66F-A	KV-14T1U	RM-836	UK	SCC-H50E-A
KV-14T1E	RM-836	Spanish	SCC-H66E-A				

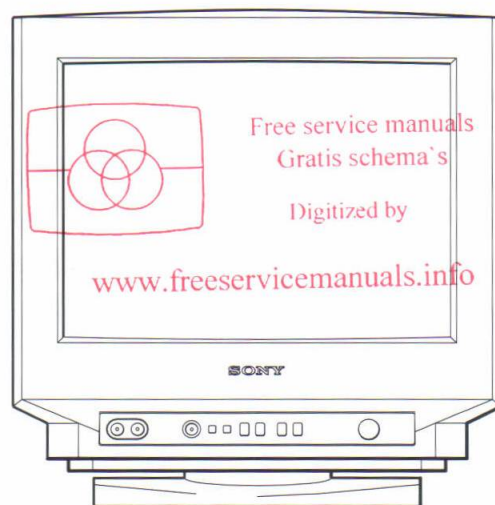

TRINITRON® COLOR TV
SONY®

KV-14M1/14T1

ITEM	MODEL	Television System	Channel Coverage	Colour System
Italian	B/G/H	VHF: E2-E12, S1-S20, A-H, H1,H2 UHF: E21-E69, S21-S41		PAL
French	B/G/H, L	VHF: E2-E12, S1-S20, F2-F10, B-Q UHF: E21-E69, S21-S41, F21-F69		PAL, SECAM
AEP	B/G/H	VHF: E2-E12, S1-S20 UHF: E21-E69, S21-S41		PAL, SECAM
Spanish	B/G/H	VHF: E2-E12S1-S20 UHF: E21-E69, S21-S41		PAL
OIRT	B/G/H, D/K	B/G/H VHF: E2-E12 UHF: E21-E69 D/K VHF: R01-R12 UHF: R21-R69		PAL, SECAM NTSC3.58/4.43 (video input only)
Irish UK	I	14M1L/14T1L UHF: 21-69 VHF: A-J 14M1U/14T1U UHF: 21-69		PAL

MODEL	14M1A 14T1A	14M1B 14T1B	14M1D 14T1D	14M1E 14T1E	14M1K 14T1K	14M1L/14T1L 14M1U/14T1U	14T1R
Power Consumption	39W	39W	39W	39W	39W	50W	39W

SPECIFICATIONS

Picture Tube Super Trinitron
Approx. 37 cm (14 inches)
(Approx. 34 cm picture measured
diagonally)
110° -deflection

Rear/Front Terminals**[INPUTS]**

21-pin Euro connector (CENELEC standard)

- Including audio / video input
- Including RGB input

Front connectors

- Video (phono jack)
- Audio (phono jack)

[OUTPUTS]

- 🎧 Headphone jack: minijack
- Sound output 3W (music power)
2W (RMS)

- Dimensions With tilt-swivel
373x385x408 mm approx.
Without tilt-swivel
373x360x408 mm approx.

- Weight Approx. 10.0 kg
- Supplied accessories RM-836 Remote Commander (1)
IEC designated batteries (2)
Tilt-swivel stand (1)
Antenna (1)

Other features

- Teletext/Fasttext (KV-14T1A/14T1B/14T1D/14T1E)
- Teletext (KV-14T1K/14T1L/14T1R/14T1U)


[RM-836]

Remote control system	Infrared control
Power requirements	3V dc (2 batteries) R6 (size AA)
Dimensions	Approx. 210x45x24 mm (w/h/d)
Weight	Approx. 90g (Not including battery)

Design and specifications are subject to change without notice.


Model name Item	KV-14M1A KV-14T1A	KV-14M1B KV-14T1B	KV-14M1D KV-14T1D	KV-14M1E KV-14T1E	KV-14M1K KV-14T1K	KV-14T1R	KV-14M1L KV-14T1L KV-14M1U KV-14T1U
MPIP	OFF	OFF	OFF	OFF	OFF	OFF	OFF
PIP	OFF	OFF	OFF	OFF	OFF	OFF	OFF
Scart 1	ON	ON	ON	ON	ON	ON	ON
Scart 2	OFF	OFF	OFF	OFF	OFF	OFF	OFF
Front in (3)	ON	ON	ON	ON	ON	ON	ON
Scart 4	OFF	OFF	OFF	OFF	OFF	OFF	OFF
AKB in 16:9 mode	ON	ON	ON	ON	ON	ON	ON
Txt/FLOF	ON (14T1A only)	ON (14T1B only)	ON (14T1D only)	ON (14T1E only)	ON (14T1K only)	ON	ON (14T1L/14T1U only)
TOPText	OFF	OFF	OFF	OFF	OFF	OFF	OFF
Norm B/G/H	ON	ON	ON	ON	ON	ON	OFF
Norm I	OFF	OFF	OFF	OFF	OFF	OFF	ON
Norm D/K	OFF	OFF	OFF	OFF	ON	ON	OFF
Norm AUS	OFF	OFF	OFF	OFF	OFF	OFF	OFF
Norm L	OFF	ON	OFF	OFF	OFF	OFF	OFF
Norm SAT	OFF	OFF	OFF	OFF	OFF	OFF	OFF
Norm M	OFF	OFF	OFF	OFF	OFF	OFF	OFF
Language Preset	Italian	French	German	Spanish	OIRT	OIRT	English

WARNING (KV-14M1L/14T1L/14M1U/14T1U only)

The flexible mains lead is supplied connected to a **B.S. 1363** fused plug having a fuse of **5 AMP** capacity. Should the fuse need to be replaced, use a **5 AMP FUSE** approved by **ASTA** to **BS 1362**, ie one that carries the  mark.



IF THE PLUG SUPPLIED WITH THIS APPLIANCE IS NOT SUITABLE FOR YOUR SOCKET OUTLETS IN YOUR HOME. IT SHOULD BE CUT OFF AND AN APPROPRIATE PLUG FITTED. THE PLUG SEVERED FROM THE MAINS LEAD MUST BE DESTROYED AS A PLUG WITH BARED WIRES IS DANGEROUS IF ENGAGED IN A LIVE SOCKET OUTLET.

When an alternative type of plug is used it should be fitted with a **5 AMP FUSE**, otherwise the circuit should be protected by a **5 AMP FUSE** at the distribution board.

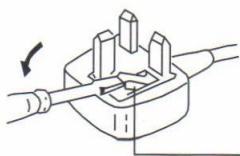

How to replace the fuse.
Open the fuse compartment with the screwdriver blade and replace the fuse.

21 pin connector (1)

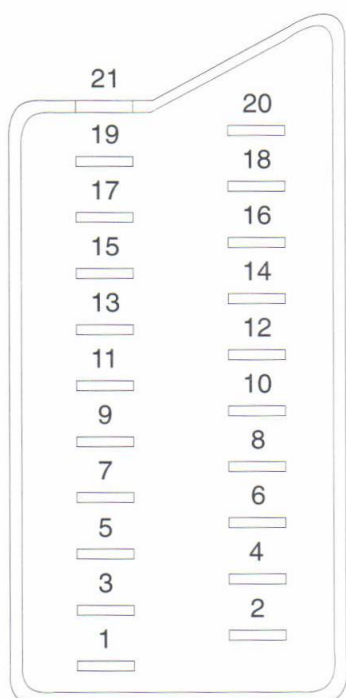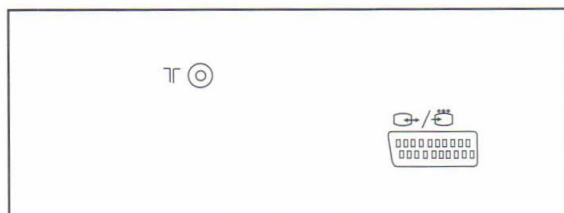

Pin No.	1	2	4	Signal	Signal Level
1	○	○	○	Audio output B (Right)	Standard level : 0.5V rms Output impedance : Less than 1k ohms*
2	○	○	○	Audio input B (Right)	Standard level : 0.5V rms Output impedance : More than 10k ohms*
3	○	○	○	Audio output A (Left)	Standard level : 0.5V rms Output impedance : Less than 1k ohm*
4	○	○	○	Ground (Audio)	
5	○	○	○	Ground (Blue)	
6	○	○	○	Audio input A (Left)	Standard level : 0.5V rms Output impedance : Less than 10k ohm*
7	○	●	●	Blue input	0.7 ± 3dB, 75 ohms, positive
8	○	○	○	Function select (AV control)	High state (9.5 - 12V) : Part mode Low state (0 - 2V) : TV mode Input impedance : More than 10k ohms Input capacitance : Less than 2nF
9	○	○	○	Ground (Green)	
10	○	○	○	Open	
11	○	●	●	Green	
12	○	○	○	Open	
13	○	○	○	Ground (Red)	
14	○	○	○	Ground (Blanking)	
15	○	—	—	Red input	0.7 ± 3dB, 75 ohms, positive
	—	○	○	(S signal) chroma input	0.7 ± 3dB, 75 ohms, positive
16	○	●	●	Blanking input (Ys signal)	High state (1 - 3V) Low state (0 - 0.4V) Input impedance : 75 ohms
17	○	○	○	Ground (Video output)	
18	○	○	○	Ground (Video input)	
19	○	○	○	Video output	1V ± 3dB, 75ohms, positive sync : 0.3V (-3 + 10dB)
20	○	—	—	Video input	1V ± 3dB, 75ohms, positive sync : 0.3V (-3 + 10dB)
	—	○	○	Video input Y (S signal)	1V ± 3dB, 75ohms, positive sync : 0.3V (-3 + 10dB)
21	○	○	○	Common ground (plug, shield)	

○ Connected ● Not Connected (Open) * at 20Hz - 20kHz

Pin No.	Signal	Signal Level
1	Ground	
2	Ground	
3	Y (S signal) input	1V ± 3dB 75 ohm, positive Sync. 0.3V -3 + 10dB
4	C (S signal) input	0.3V ± 3dB 75ohm, positive Sync.




TABLE OF CONTENTS

<u>Section</u>	<u>Title</u>	<u>Page</u>	<u>Section</u>	<u>Title</u>	<u>Page</u>
1. GENERAL			5. DIAGRAMS		
	Getting Started	7	5-1.	Block Diagrams	25
	TV Operation	8	5-2.	Circuit Boards Location	29
	MENU Operation	9	5-3.	Schematic Diagrams and Printed Wiring Boards	29
	Optional Connections	12		*A Board	33
	Additional Information	13		*C Board	39
2. DISASSEMBLY			5-4.	Semiconductors	41
2-1.	Rear Cover Removal	14	6. EXPLODED VIEWS		
2-2.	Service Position	14	6-1.	Chassis and Picture Tube	42
2-3.	Picture Tube Removal	15	7. ELECTRICAL PARTS LIST		44
3. SET-UP ADJUSTMENTS					
3-1.	Beam Landing	16			
3-2.	Convergence	17			
3-3.	Screen (G2), Drive, White Balance, Sub Color and Sub Brightness	19			
3-4.	Focus	19			
4. CIRCUIT ADJUSTMENTS					
4-1.	Electrical Adjustments	20			
4-2.	Test Mode 2 :	21			
4-3.	BE-4 Self Diagnostic Software	23			

CAUTION

SHORT CIRCUIT THE ANODE OF THE PICTURE TUBE AND THE ANODE CAP TO THE METAL CHASSIS, CRT SHIELD, OR CARBON PAINTED ON THE CRT, AFTER REMOVING THE ANODE.

WARNING !!

AN ISOLATION TRANSFORMER SHOULD BE USED DURING ANY SERVICE TO AVOID POSSIBLE SHOCK HAZARD, BECAUSE OF LIVE CHASSIS.

THE CHASSIS OF THIS RECEIVER IS DIRECTLY CONNECTED TO THE AC POWER LINE.

SAFETY-RELATED COMPONENT WARNING!!

COMPONENTS IDENTIFIED BY SHADING AND MARK ⚠ ON THE SCHEMATIC DIAGRAMS, EXPLODED VIEWS AND, IN THE PARTS LIST ARE CRITICAL FOR SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.

ATTENTION

APRES AVOIR DECONNECTE LE CAP DE L'ANODE, COURT-CIRCUITER L'ANODE DU TUBE CATHODIQUE ET CELUI DE L'ANODE DU CAP AU CHASSIS METALLIQUE DE L'APPAREIL, OU AU COUCHE DE CARBONE PEINTE SUR LE TUBE CATHODIQUE OU AU BLINDAGE DU TUBE CATHODIQUE.


ATTENTION !!

AFIN D'EVITER TOUT RISQUE D'ELECTROCUTION PROVENANT D'UN CHÂSSIS SOUS TENSION, UN TRANSFORMATEUR D'ISOLEMENT DOIT ETRE UTILISÉ LORS DE TOUT DÉPANNAGE. LE CHÂSSIS DE CE RÉCEPTEUR EST DIRECTEMENT RACCORDÉ À L'ALIMENTATION SECTEUR.

ATTENTION AUX COMPOSANTS RELATIFS À LA SÉCURITÉ!!

LES COMPOSANTS IDENTIFIÉS PAR UNE TRAME ET PAR UNE MARQUE ⚠ SUR LES VUES EXPLOSÉES ET LES LISTES DE PIÉCES SONT D'UNE IMPORTANCE CRITIQUE POUR LA SÉCURITÉ DU FONCTIONNEMENT. NE LES REMPLACER QUE PAR DES COMPOSANTS SONY DONT LE NUMÉRO DE PIÉCE EST INDIQUÉ DANS LE PRÉSENT MANUEL OU DANS DES SUPPLÉMENTS PUBLIÉS PAR SONY.

The operating instructions mentioned here are partial abstracts from the Operating Instruction Manual. The page numbers of the Operating Instruction Manual remain as in the manual.

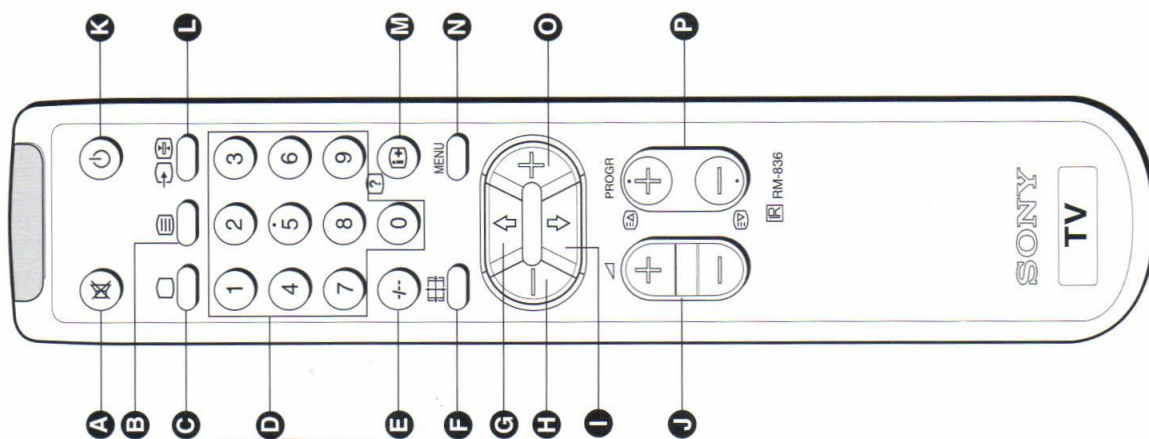


Free service manuals

Gratis schema's

Digitized by

www.freeservicemanuals.info

SECTION 1 GENERAL

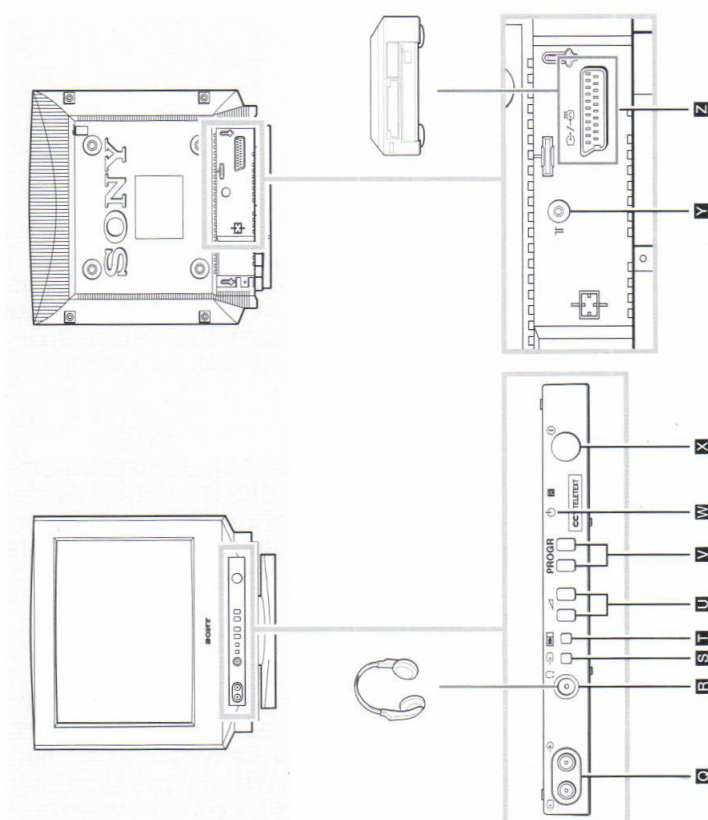



Step 1

Inserting the Batteries into the Remote Commander



Step 2

Installing the Tilt-Swivel

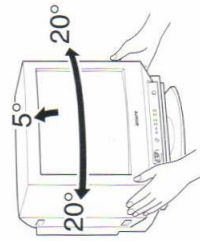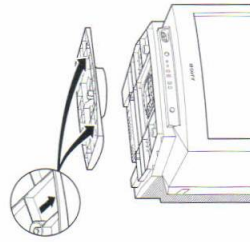


1 Turn the TV upside down onto a soft base.

2 Check that the arrows point forward and clip the swivel to the base of the TV.

3 Turn the TV again.

4 Use the tilt-swivel to bring the TV into the optimum viewing position.


Note • To remove the tilt-swivel, check that the arrows are pointing forward, pinch the clip of the swivel and pull away from the base of the TV.

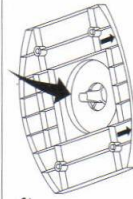

Step 3

Connecting the Aerial

If you connect a VCR, skip to step 4.

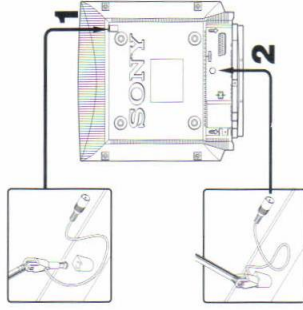


Connect an external aerial to the socket **Y**.

Where an external aerial is not available connect the indoor aerial supplied:

1 Insert the supplied aerial into the opening on top of the set.

2 Connect the aerial to the socket **Y** on the rear of the set.

3 Adjust the aerial for optimum reception.

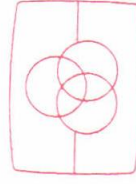


Free service manuals
Gratuits schéma's

Digitized by

www.freeservicemanuals.info

Step 4

Connecting a VCR

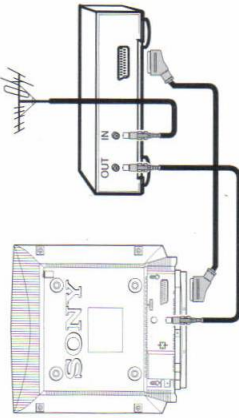

- It is recommended to tune in the VCR signal to programme number "0". For details, see "Presetting Channels Manually" on page 13.

Step 5


Presetting Channels Automatically

TV searches for all available channels. If manual tuning is preferred see Menu option - Presetting Channels Manually.

- 1 Plug into mains.
Depress power switch **ⓧ** on TV set.

- 2 Press and hold **▶▶** **1** on TV set until auto tuning starts and screen shows.

Note • When Auto tuning stops the programme on position 1 is seen.



TV Operation

This section explains functions used whilst watching TV. Most operations are carried out using the Remote Commander.

To	Press
Switch on	ⓧ on TV
Switch off temporarily	ⓧ TV is now in standby mode, ⓧ indicator W on TV lights.
Switch on again	ⓧ , PROGR +/- ⓧ V or any number button ⓧ
Switch off completely	ⓧ X on TV To save energy we recommend switching off completely when TV is not in use.
Select programmes	PROGR +/- ⓧ V or number buttons ⓧ For double digit numbers press -/-- ⓧ then the number e.g. For 23, press -/-- ⓧ then 2 and 3.
Display the programme number	ⓧ L Press again to make programme number disappear.
Adjust the volume	ⓧ +/- ⓧ U
Mute the sound	ⓧ A Press again to restore sound.
View video input	ⓧ K S Press again to return to TV programme.
View programmes in 16:9 mode	ⓧ F Press again to return to 4:3 mode.

Note • **ⓧ** **F** is to be used to optimise the viewing of 16:9 signals which will be available in the future.

Viewing Teletext

Teletext is an information service broadcast by TV stations.


- 1 Select the channel which carries the teletext service you wish to receive.
- 2 Press **[B]** to switch on teletext.
- 3 Input three digits for the page number using the programme number buttons **[0]** or **PROGR +/- [P]**.
- 4 Press **[G]** to switch off teletext.

Note • Teletext errors may occur if the broadcasting signals are weak.

Using Other Teletext Functions

Superimposing teletext on the TV

Press **[B]** once in teletext mode or twice in TV mode to superimpose teletext on the TV screen.
Press **[B]** again to cancel superimposing.

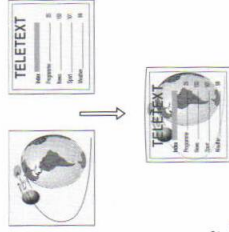

Freezing a teletext subpage

Press **[K]** (HOLD) to freeze the subpage. Freezing the page prevents the information that is displayed from being updated.
Press **[K]** to cancel HOLD and allow update to continue.

Revealing concealed information (eg: answers to a quiz)


Press **[L]** to reveal information.
Press again to conceal the information.

Using colour buttons to access pages

When the colour coded menu appears at the bottom of a page, press the colour button (red, green, blue or yellow) **[G][H][O][N]** to access the corresponding page.

Note • A programme status message in a blue box may appear when you change programmes (depends on broadcasters).

Use buttons on Remote Commander to control Menu screen.

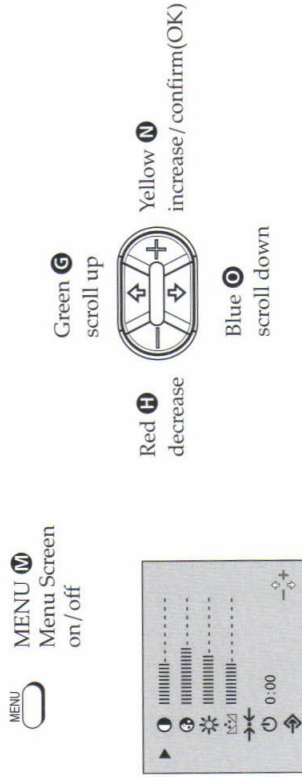

Adjusting the Picture

Free service manuals
Gratis schema's

Digitized by

- 1 Press MENU **[M]**.

- 2 Press green **[G]** or blue **[O]** button to select the item you wish to change.

Symbol	Item	-	Effect	+
	Picture	Less	More	
	Colour	Less	More	
	Brightness	Darker	Brighter	
	Hue	Reddish	Greenish	

Note • Hue is available only when NTSC signal is input.

- 3 Press red **[H]** or yellow **[N]** button to change levels.


- 4 Press MENU **[M]** to return to normal TV screen.

Note • To reset to factory preset picture levels, press green **[G]** or blue **[O]** button to select **[<>]** and press yellow (OK) **[N]** button.

Using the Sleep Timer

The TV may be set to switch to the standby mode automatically after a length of time chosen by you. You may set the time in 30 minutes steps up to 4 hours.

- 1 Press MENU **M**.
- 2 Press green **G** or blue **B** button to select **⌚**.

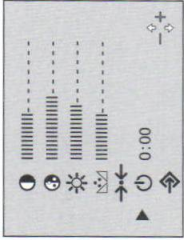


- 3 Press red **H** or yellow **N** button to set time delay.
0.00 (OFF) 0.30 1.00 1.30 4.00
- 4 Press MENU **M** to return to normal TV screen.
When watching TV, press **⏻** to display time remaining.

Presetting Channels Manually

Up to 60 programme positions are available for presetting channels.

- 1 Press MENU **M**.
- 2 Press green **G** or blue **B** button to select **⇨** and press yellow (OK) **N** button.
- 3 Select programme number using PROCR +/- **PV** or the number buttons **0-9**.

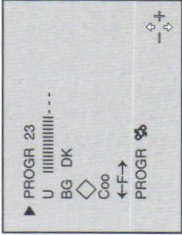


- 4 Press green **G** or blue **B** button to select TV system (BG or DK) if necessary and press red **H** or yellow **N** button to change TV system.
- 5 Press green **G** or blue **B** button to select tuning bar (|||||....) and press red **H** or yellow **N** button to start channel search. When a channel is found the tuning bar stops moving and you see the picture.
- 6 If you want to store, press green **G** or blue **B** button to select **◇** and press yellow (OK) **N** button. If you do not want to store, press red **H** or yellow **N** button to continue search.
- 7 Repeat steps 3 to 6 for all other channels.
- 8 Press MENU **M** to return to normal TV screen.

Skipping Programme Positions

You can skip unused programme positions when selecting channels with the **PROGR +/-** **⏮** **⏭** buttons. You can still select them, however, using the number buttons **0-9**.


- 1 Press **MENU** **⏻**.
- 2 Press green **G** or blue **O** button to select **↔** and press yellow **N** button.
- 3 Select programme number you want to skip using **PROGR +/-** **⏮** **⏭** button or number buttons **0-9**.
- 4 Press green **G** or blue **O** button to select **Coo** and press yellow **N** button.
- 5 Press green **G** or blue **O** button to select **↔** and press yellow **N** button to store.
- 6 Repeat steps 3 to 5 for other unused programme positions.
- 7 Press **MENU** **⏻** to return to normal TV screen.

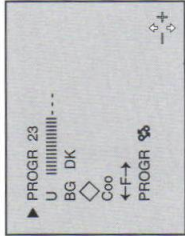

Fine-Tuning Channels

You can fine tune a stored channel if necessary.

- 1 Select the channel you wish to fine tune.
- 2 Press **MENU** **⏻**.
- 3 Press green **G** or blue **O** button to select **↔** and press yellow **N** button.
- 4 Press green **G** or blue **O** button to select **↔F →** and use red **H** or yellow **N** button to adjust tuning.
- 5 Press green **G** or blue **O** button to select **↔** and press yellow **N** button to store.
- 6 Press **MENU** **⏻** to return to normal TV screen.

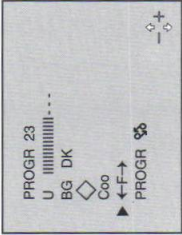

Exchanging Programme Positions

After tuning you may wish to rearrange the programme positions.




Free service manuals
Gratis schema's

Digitized by

- 1 Press MENU **M**.
- 2 Press green **G** or blue **B** button to select \Rightarrow and press yellow (OK) **N** button. www.freeservicemanuals.info

- 3 Press green **G** or blue **B** button to select PROGR **01** and press yellow (OK) **N** button.

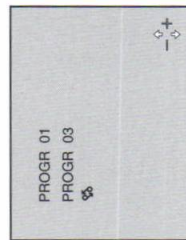

- 4 Press red **H** or yellow **N** button to select the first programme position.

- 5 Press the blue **B** button.


- 6 Press the red **H** or yellow **N** button to select the second programme position.

- 7 Press blue **L** button to select **01** and press yellow (OK) **N** button to exchange.

- 8 Repeat steps 4 to 7 for other programme positions.

- 9 Press MENU **M** to return to normal TV screen.

Using the Connectors

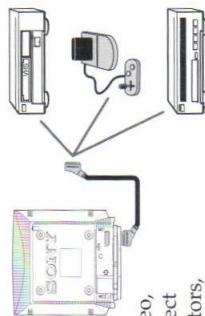

Your TV has one 21-pin connector **Z** on the rear of the set and two connectors (phono jacks \rightarrow video, \rightarrow audio) **Q** on the front of the set. You can connect optional audio or video equipment to these connectors, such as a VCR, video games or a video disc player.

- 1 Press \rightarrow **K5** to view the video input signal.
- 2 Press \rightarrow **K5** or **O** **C** to return to the normal TV screen.

Note • To avoid picture distortion, do not use the 21-pin connector and the front connectors at the same time.

Connecting Headphones

Plug in the headphones to the **R** socket on the front of the TV set, to mute the sound from the speaker.


Troubleshooting

Here are some simple solutions to the problems which affect the picture and sound.


Problem	Solution
No picture, screen is dark, no sound	<ul style="list-style-type: none">• Plug the TV in.• Press X on the TV.• Press C or the programme number 0 on the remote commander if 0 indicator W is on.• Check the aerial connection.• Check that the video source is on.• Turn the TV off for 3 or 4 seconds and then turn it on again using X.
Poor or no picture (screen is dark, sound is good)	<ul style="list-style-type: none">• Press MENU M and adjust brightness picture and colour levels.
Good picture, no sound	<ul style="list-style-type: none">• Adjust the volume Δ + / - U.• Disconnect any headphones.• Press A if AK is displayed on the screen.• Press MENU M and select appropriate TV system.
No colour on colour programmes	<ul style="list-style-type: none">• Press MENU M and adjust colour balance.• Press MENU M and reset to factory settings.
Distorted picture when you change programmes or select teletext	<ul style="list-style-type: none">• Turn off the equipment connected to the 21-pin connector Z.
Partially discoloured picture when you swivel the TV	<ul style="list-style-type: none">• Turn off the TV for fifteen minutes using the power switch X on TV set then turn on again.
Remote commander does not function	<ul style="list-style-type: none">• Replace the batteries.
<ul style="list-style-type: none">• If you continue to have these problems, have your TV serviced by qualified personnel.• NEVER open the casing yourself.	

SECTION 2 DISASSEMBLY


2-1. REAR COVER REMOVAL

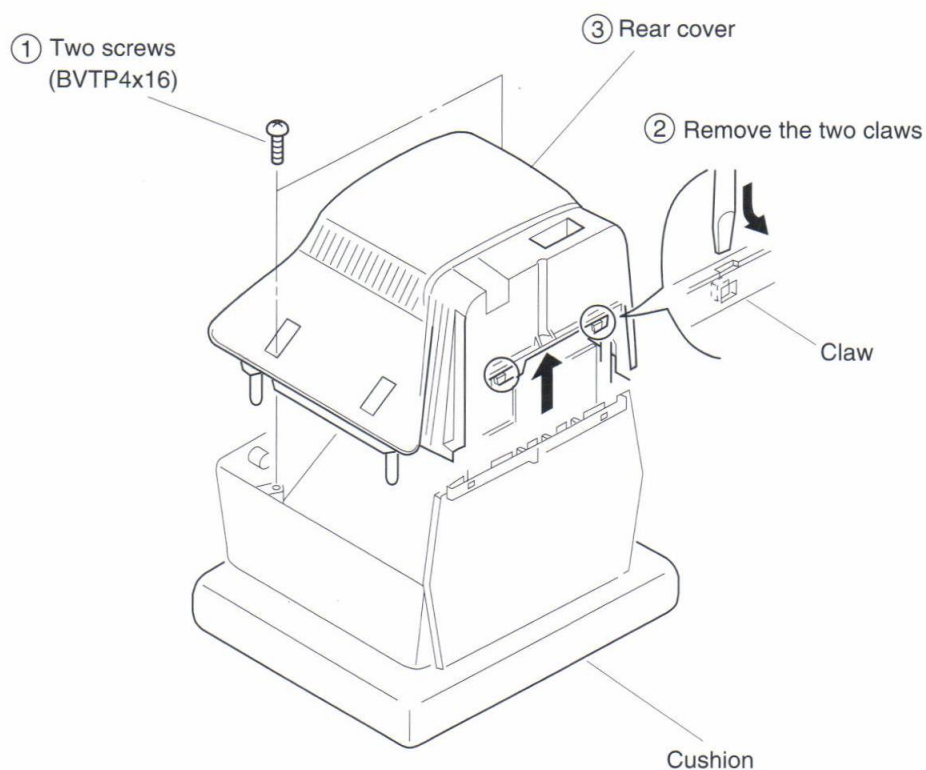

2-2. SERVICE POSITION

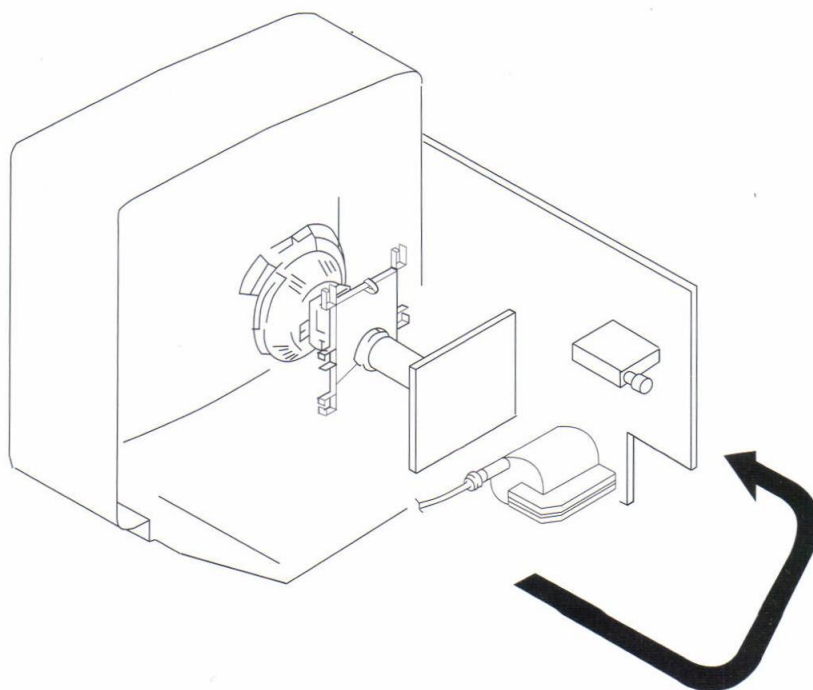


2-3. PICTURE TUBE REMOVAL

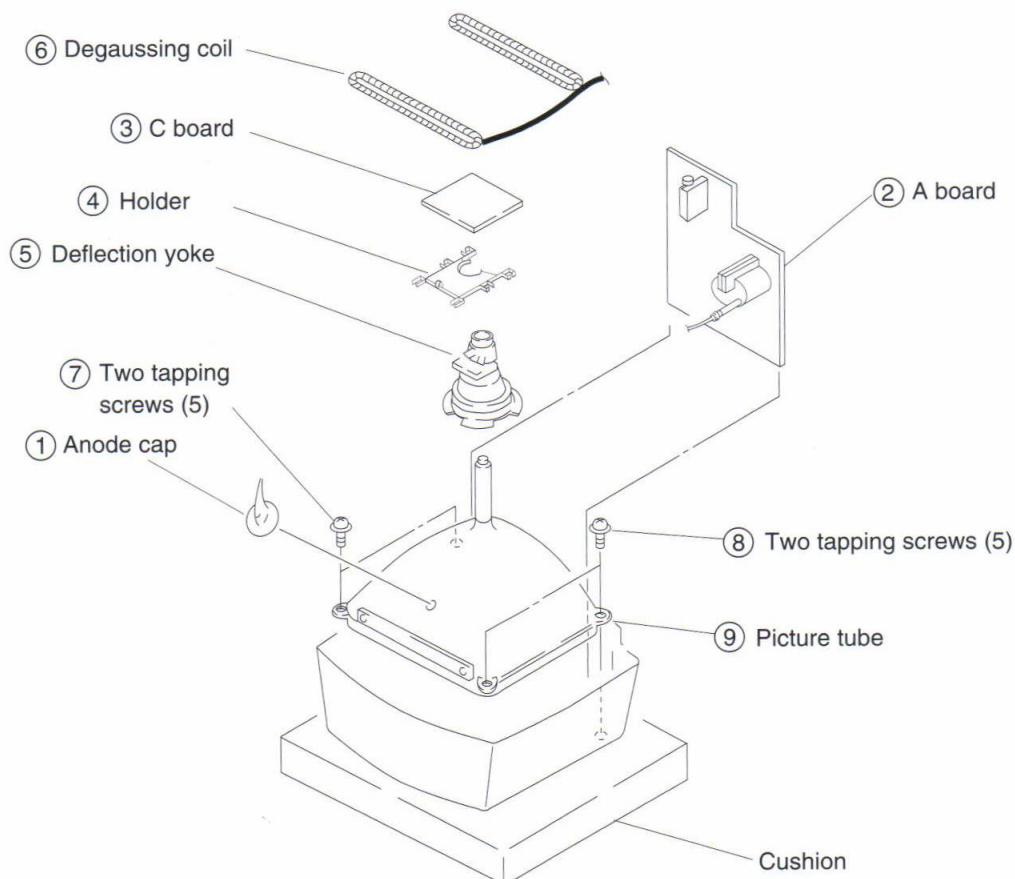

• REMOVAL OF ANODE-CAP

Note: Short circuit the anode of the picture tube and the anode cap to the metal chassis, CRT shield or carbon paint on the CRT, after removing the anode.


* REMOVING PROCEDURES.

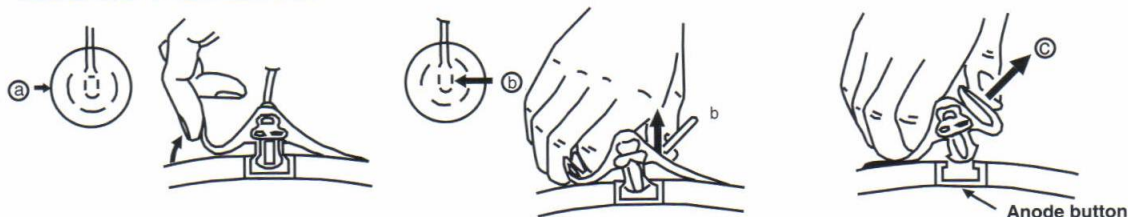

- ① Turn up one side of the rubber cap in the direction indicated by the arrow (a)
- ② Using a thumb pull up the rubber cap firmly in the direction indicated by the arrow (b)
- ③ When one side of the rubber cap is separated from the anode button, the anode-cap can be removed by turning up the rubber cap and pulling it up in the direction of the arrow (c)

• HOW TO HANDLE AN ANODE-CAP

- ① Don't damage the surface of anode-cap with sharp shaped material !
- ② Don't press the rubber hardly not to hurt inside of anode-caps !
A metal fitting called as shatter-hook terminal is built into the rubber.
- ③ Don't turn the foot of rubber over hardly !
The shatter-hook terminal will stick out or damage the rubber.

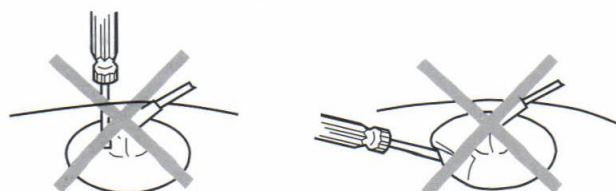

SECTION 3 SET-UP ADJUSTMENTS

- The following adjustments should be made when a complete realignment is required or a new picture tube is installed.
- These adjustments should be performed with the rated power supply voltage, unless otherwise noted.

The Contrast and Brightness controls should be set as follows unless otherwise noted:

- CONTRAST control 80%
(or Normal by commander)
- ☼ BRIGHTNESS control 50%

Perform the adjustments in the following order:

1. Beam Landing
2. Convergence
3. Screen (G2), Drive, White Balance, Sub Color and Sub Brightness.
4. Focus

Note: Test Equipment Required.

1. Color bar/Pattern Generator
2. Degausser
3. DC Power Supply
4. Digital multimeter
5. Oscilloscope

Preparation:

- In order to reduce the influence of external magnetic forces on the picture tube, face the TV set in an easterly or westerly direction.
- Turn the power switch for the unit ON and erase the magnetic force using a degausser.

3-1. BEAM LANDING

Demagnetize with a degausser.

1. Input an all white raster signal from the pattern generator.
CONTRAST } normal
BRIGHTNESS }
2. Switch the raster signal of the pattern generator to Red.
3. Move the deflection yoke backward, and adjust with the purity control so that Red is at the center and the Blue and Green are evenly spaced at the sides. see (Fig. 3-1 - 3-3)
4. Move the deflection yoke forward, and adjust so that the entire screen becomes Red. (Fig. 3-1)
5. Switch the raster signal to Blue and then Green to confirm the condition.
6. When the position of the deflection yoke has been determined, tighten it with the deflection yoke mounting screw.
7. When the landing at the corners is not correct, adjust by using disk magnets. (Fig. 3-4)

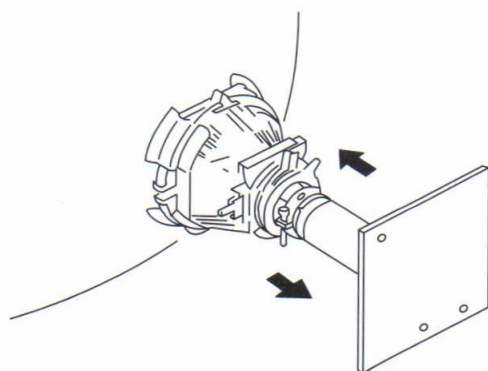


Fig. 3-1

Fig. 3-2

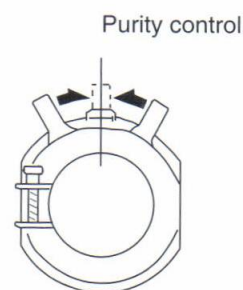


Fig. 3-3


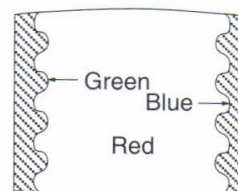


Fig. 3-4

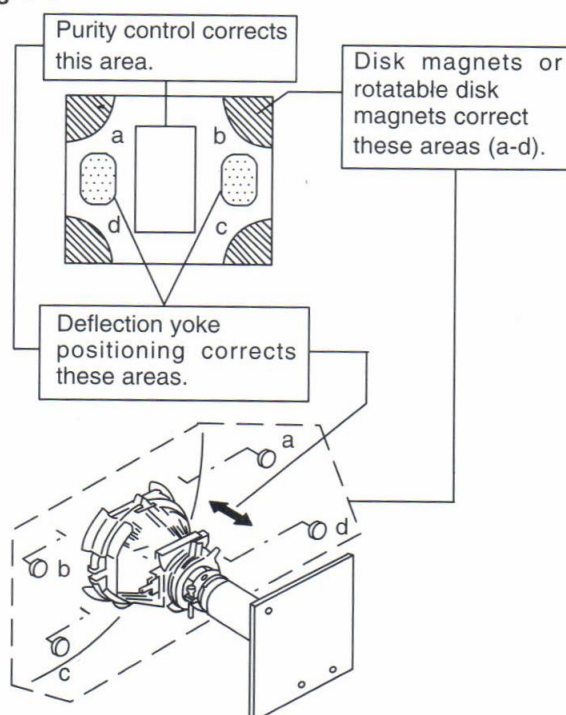


3-2. CONVERGENCE


Preparation:

- Before starting, perform FOCUS, H.SIZE, and V.SIZE adjustments.
- Set the BRIGHTNESS control to minimum.
- Input a dot pattern from the pattern generator.


(1) Horizontal and Vertical Static Convergence

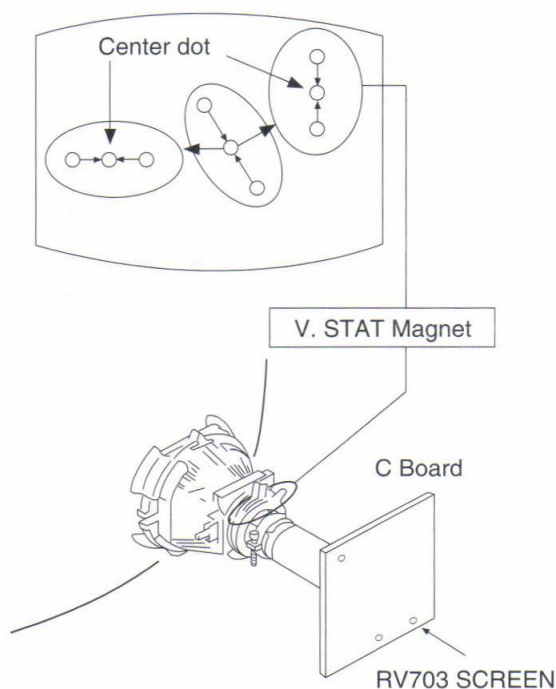

1. Adjust the V.STAT magnet to converge the Red, Green and Blue dots at the center of the screen. (Vertical and Horizontal movement)
- Tilt the V.STAT magnet and adjust the static convergence by opening or closing the V.STAT magnet.

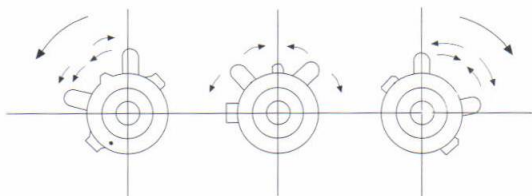

2. When the V.STAT magnet is moved in the direction of the (a) and (b) arrows, the Red, Green and Blue dots move as shown below.

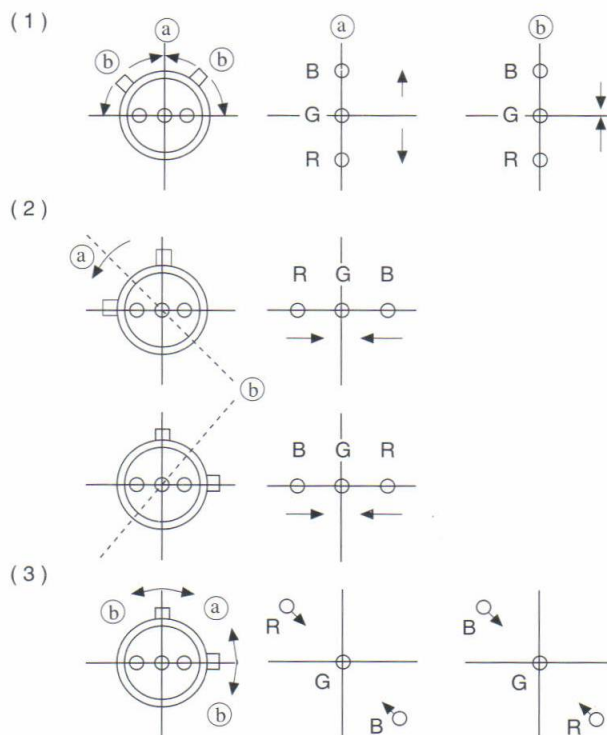


If the Red and Blue dots do not converge with the Green dots, perform the following steps.

1. Move the BMC magnet (a) to correct for insufficient H.static convergence.
2. Rotate the BMC magnet (b) to correct for insufficient V.static convergence.

In either case, repeat the Beam Landing Adjustment.


www.freesevicemanuals.info

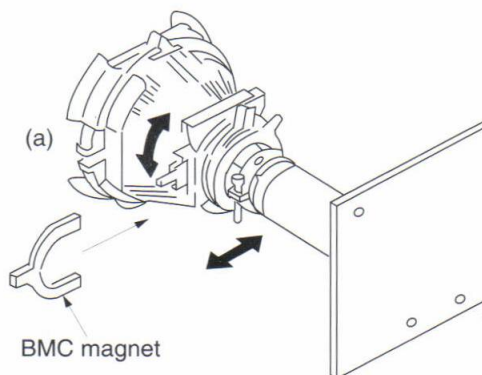



(2) Dynamic Convergence Adjustment

Preparation:


- Before starting to perform the Horizontal and Vertical static convergence adjustment.
1. Slightly loosen the deflection yoke screw.
 2. Remove the deflection yoke spacers.
 3. Move the deflection yoke for best convergence as shown below.
 4. Tighten the deflection yoke screw.
 5. Install the deflection yoke spacers.

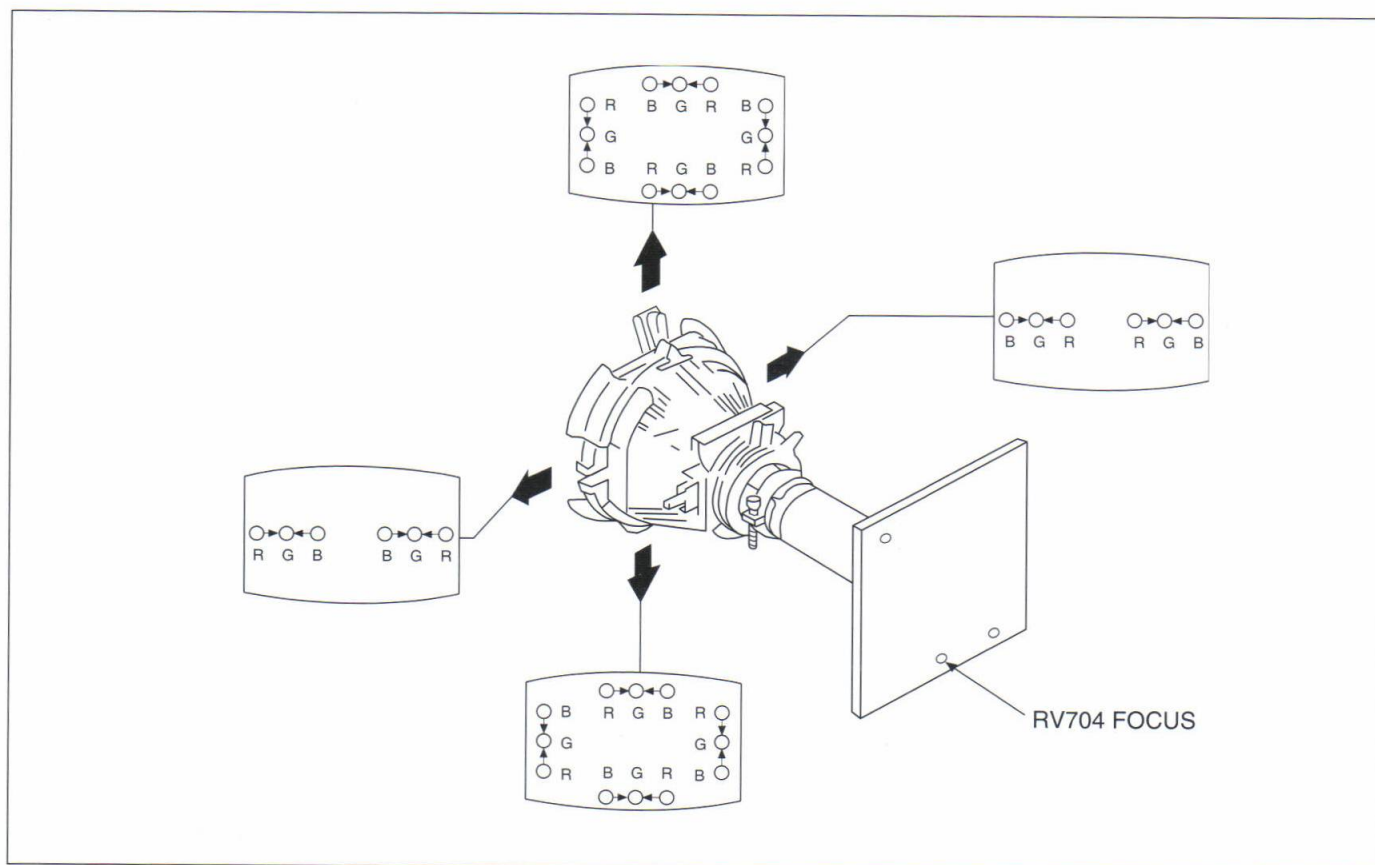

(3) Screen-corner Convergence.

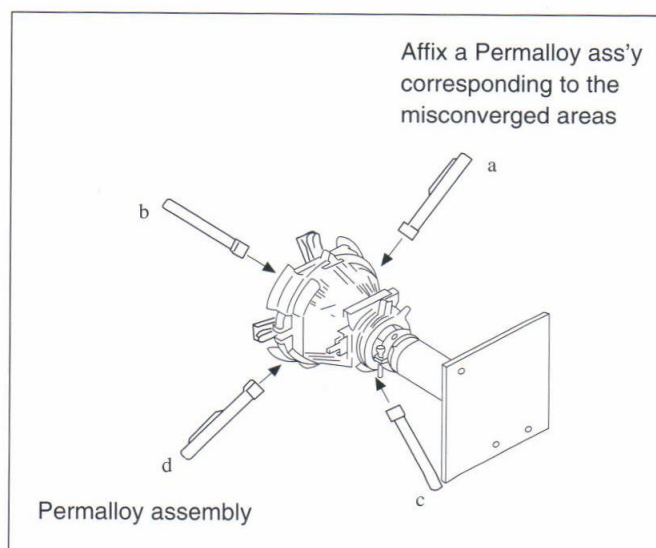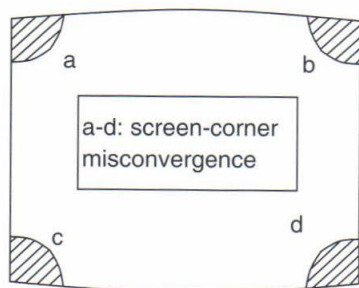

3-3. SCREEN (G2), DRIVE, WHITE BALANCE, SUB COLOR and SUB BRIGHTNESS.

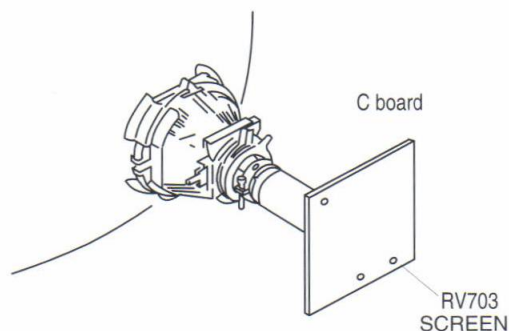


Screen (G2) setting

1. Input a 0 IRE (Black Level) signal from the pattern generator.
2. Enter into the Service Mode "Test""Test" and 38.
3. Adjust RV703 until the Down arrow is displayed.
4. Adjust RV703 until the Down arrow just disappears.
5. Press the TV Button on the Remote Commander to store the data.

Drive Level

1. Input a Video signal containing a small area of 100% white on a black background.
2. Connect an oscilloscope to Pin ⑦ of J701 (R OUT) on the C Board.
3. Set the Picture to maximum using "Test""Test" and 01.
4. Enter into the Service mode (Adjust Menu).
5. Using the Blue and Green buttons select "RED HWB".
6. Using the Red and Yellow buttons on the Remote Commander adjust until the oscilloscope waveform has an amplitude of 85V.

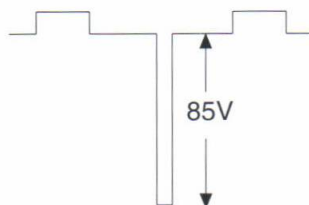


White Balance Adjustment

1. Input an all white pattern from the pattern generator.
2. Adjust the Color and Brightness controls to the standard level.
3. Enter into the Service Mode.
4. Adjust the Green HWB and Blue HWB so that the White Balance becomes optimum.

Sub Color Adjustment

1. Input a PAL color bar pattern from the pattern generator.
2. Connect an oscilloscope to Pin ⑤ of J701 (B OUT) on the C Board.
3. Enter into the Service Mode "Test""Test" and 22.
4. Using the Red and Yellow buttons on the Remote Commander adjust until the oscilloscope waveform becomes as follows :

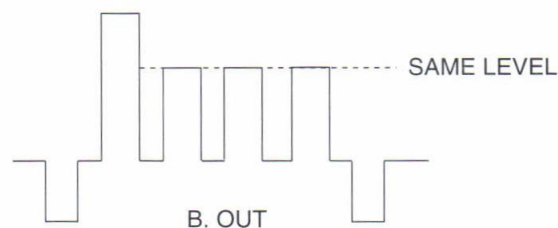


Note : If the TV is able to receive PAL and SECAM transmissions, repeat the above procedure using a Secam color bar signal.

Sub Brightness Adjustment

1. Input a Philips pattern from the pattern generator.
2. Enter into the Service Mode "Test""Test" and 23.
3. Using the Red and Yellow buttons on the Remote Commander adjust until the 0 IRE of the grey scale and the cut off are only slightly visible on the screen.

3-4. FOCUS

Adjust the FOCUS control RV704 so that the whole screen is in best focus.

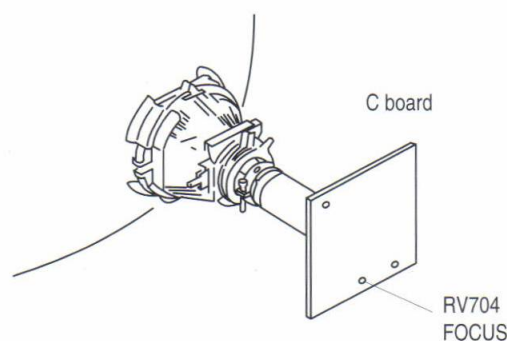

SECTION 4


CIRCUIT ADJUSTMENTS

4-1. ELECTRICAL ADJUSTMENTS

Service adjustment to this model can be performed with the supplied Remote Control Commander RM-836.


HOW TO ENTER INTO SERVICE MODE

1. Turn on the main power of the set and enter into stand-by mode.
2. Press the following sequence of buttons on the Remote Control Commander.

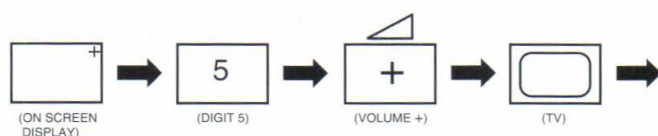

"TT-- " will appear in the top right corner of the screen
Other status information will also be displayed.

3. Press the MENU button on the Remote Commander to obtain the menu on the screen.

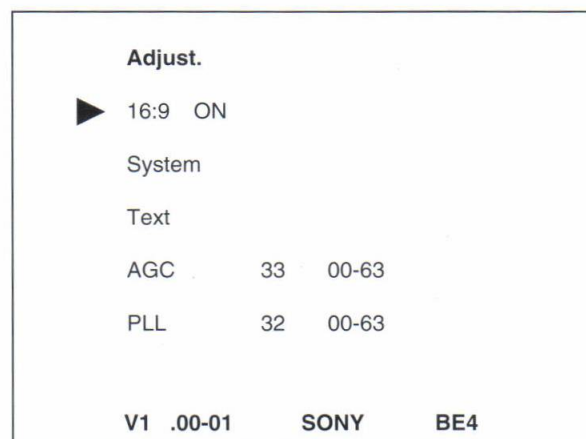

Software version

4. Press the Blue (Next) or Green (previous) buttons to select the adjustment item from the table.
5. Press the Yellow (+) or Red (-) buttons to change the data as required.
6. Turn off the power to quit the service mode when adjustments are completed.

Range of adjustments available from the on screen menu system.

Adjustment	Set	Range
16:9 Off	Select	ON/OFF
System	Select	BG-L, BG-DK UK, Eire, BG
Text	Select	EAST/WEST
AGC	Adj.	00 - 63
PLL	Adj.	00 - 63
B&W Delay	Adj.	00 - 63
Ver Size	Adj.	00 - 63
Ver, Breath	00	00 - 63
Par, Ampl	00	00 - 63
Par, Tilt	32	00 - 63
V, Linear	Adj.	00 - 63
Corn, corr	00	00 - 63
V, Cen or EW	Adj.	00 - 63
V, Position	42	00 - 63
H, Centre	Adj.	00 - 63
Blue HWB	Adj.	00 - 63
Green HWB	Adj.	00 - 63
Red HWB	Adj.	00 - 63

4-2. TEST MODE 2:

TT -- Mode is available by pressing the Test button twice, O.S.D 'TT --' appears. The functions described below are available by pressing two digits. To release the 'TT --' mode, press 0 twice, press 'TEST' , press 'TV' or switch the TV into Stand-by mode.

00	Switch 'TT--' Mode off.
01	Set picture level to maximum.
02	Set picture level to minimum.
03	Set volume to 35%.
04	Set volume to 50%.
05	Set volume to 65%.
06	Set volume to 80%.
07	Ageing condition (picture max., brightness max.).
08	Shipping condition (Analog values are RESET to factory setting, Prog 1 is selected, TT--mode switched off, Vol = 35%).
09	Dummy.
10	No function.
11	Dummy
12	Text Picture Level Offset (Enable/Disable)
13	Select Odd / Even field for Non-interlaced teletext.
14	Select Interlaced / Non-interlaced teletext display.
15	Read factory setting from ROM to NVM - Reads Volume, Brightness, Picture, Hue, Sharpness and Colour values from ROM to the actual used values (Last Power Memory).
16	No function
17	Enable / Disable Sharpness Operation.
18	Enable / Disable Teletext Operation.
19	Enable / Disable NTSC Operation.
20	No function.
21	Sub Picture.
22	Sub Colour (Pal / Secam Different Stores)
23	Sub Brightness.
24	Destination System BG/L.

25	Destination Systems BG/L.
26	Destination Systems I.
27	Destination System I/I'.
28	Destination BG only.
29	Dummy.
30	No function.
31-32	Dummy.
33	Auto AGC Adjust.
34	Auto PLL Adjust.
35-37	Dummy.
38	Enter G2 adjustment mode.
39	Dummy.
40	No function.
41	Re-initialise NVM.
42	Dummy.
43	Re-initialise Geometry settings.
44-47	Dummy
48	Set NVM testbyte to 44h in NVM.
49	Erase NVM testbyte
50	No function.


Note : For Test Modes 41 - 50, it is necessary to ensure that the TV is set to Prog 59.

IF ADJUSTMENT (AUTOMATIC)

1. Input a 38.9 MHz 100dB μ CW signal at the IF Out injection point.
2. Enter into service mode and press 34.
3. Connect a digital voltmeter to IC101 pin (23).
4. Check AFT 2.5V \pm 0.3V dc.
5. Press '00' on the Remote Commander.

SYSTEM L ADJUSTMENT (French Models)


1. Input a 33.9MHz 100dB μ CW signal at the IF Out injection point.
2. From the On Screen Menu set System to L band 1.
3. Connect a digital voltmeter to IC101 pin (23).
4. Adjust RV102 AFT for 2.5V \pm 0.3V dc.

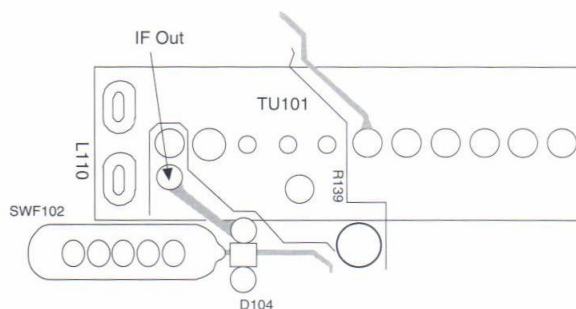

- A Board Print Side -

AGC ADJUSTMENT

1. Receive an off-air signal.
2. Enter into the Service adjust menu and select AGC.
3. Adjust the data using the Red and Yellow buttons on the Remote Commander so that there is no snow or cross - modulation visible on the screen.
4. Change the receiving off-air channel, and confirm the above status.

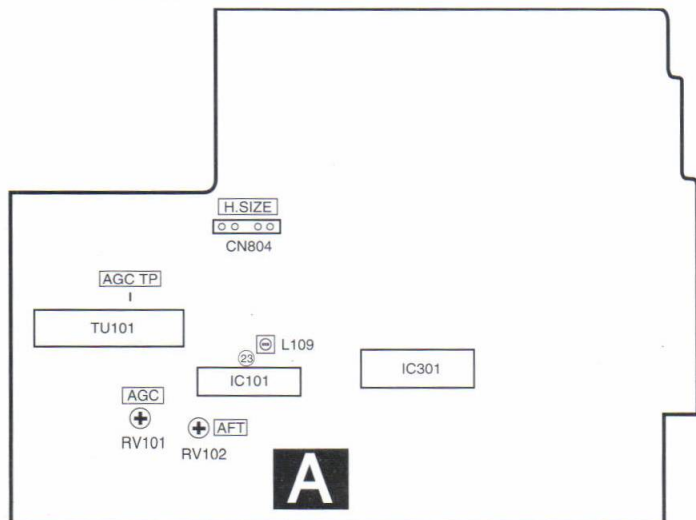

- A Board Component Side -

DEFLECTION SYSTEM ADJUSTMENT

1. Enter into the service mode.
2. Using the Blue or Green buttons select the Adjust item.
3. Press the Yellow button to enter the adjustment submenu.
4. Select and adjust each item in order to obtain the optimum image.

See Note on page 23

Adjustment	Set	Range
VERT, AMPL	Adj.	00 - 63
VER, BREATH	00	00 - 63
PAR, AMPL	00	00 - 63
PAR, TILT	32	00 - 63
V, LINEAR	Adj.	00 - 63
CORN, CORR	Adj.	00 - 63
V, CENTRE	Adj.	00 - 63
V, POSITION	42	00 - 63
H, CENTRE	Adj.	00 - 63

VERT, AMPL



V, LINEAR



V, CENTRE




H, CENTRE



H, SIZE

CN804

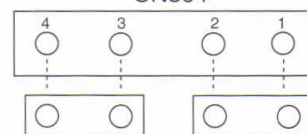

Too Small

Normal position

Fit the link as required to obtain the correct horizontal picture size. Remove the link if the H, SIZE is to large.

4-3. BE-4 SELF DIAGNOSTIC SOFTWARE

The identification of errors within the BE-4 chassis is triggered in 1 of 2 ways :- 1: Bus busy or 2: Device failure to respond to I²C. In the event of one of these situations arising the software will first try to release the Bus if busy (Failure to do so will report with a continuous flashing LED) and then communicate with each relevant device in turn to establish if a device is faulty. If a device is found to be faulty the relevant device number will be displayed through the LED by a Series of flashes which must be counted (See Table 1)., on fatal errors are reported with this method.

If a fatal error is found, the set will simply stay in whichever state it was when the error occurred, but if a non fatal error occurs the set will try to continue to operate.

Table 1

No of Flashes	Meaning
2	IC301 not acknowledging I ² C transmission, NVM OK.
3	IC301 FAULT (Not OK) - flags
4	IC301 - No H Flyback
5	IC301 - Stack Overflow.
6	Overvoltage / Overcurrent Protection (Pin 52) high.
7	IC002 not acknowledging I ² C transmission, IC301 OK.
8	IC002 and IC301 - No I ² C acknowledgment.
9	General I ² C Error (SDA or SCL being held low) (IC301, IC001, IC002, CN001)

Flash Timing Example : e.g. error number 3

Stby LED



Note : Deflection System Adjustments should not be carried out whilst using an NTSC (60Hz) signal, or if the signal is unlocked.

MEMO